

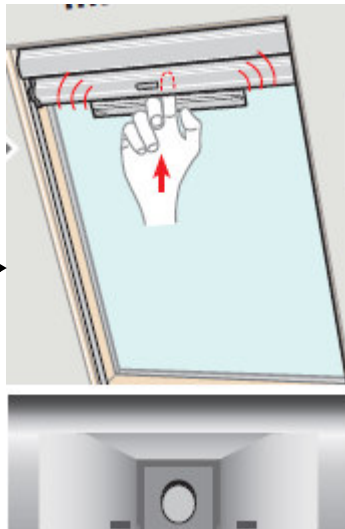



Initial registration A21 Solar blind to KLI 110

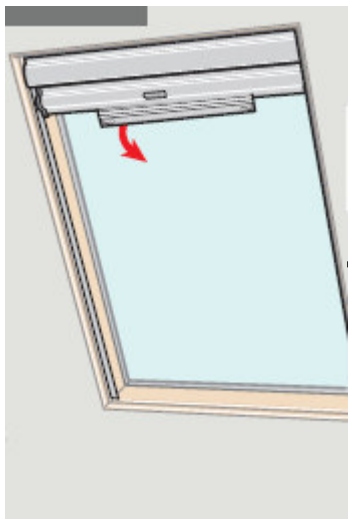


**Press
10 sec.**

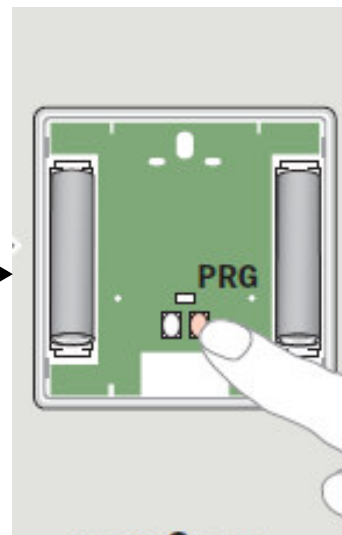


**Press 1
sec.**

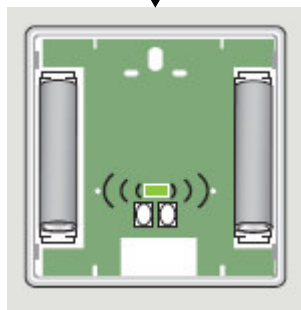

**Green LED flashes
slowly**

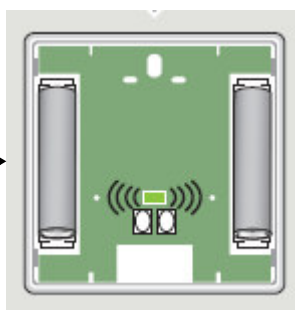


**Green LED flashes
Quickly**

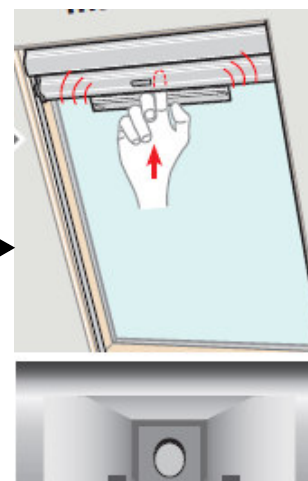



**Press 1
sec.**

**Go to
Next
page**


From
previous
page

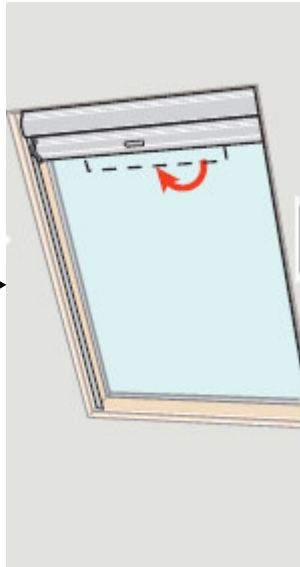


Push one of the keys
on the front.

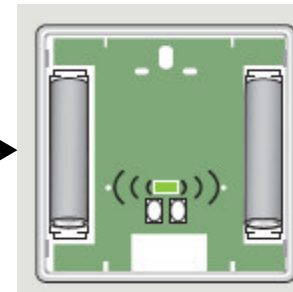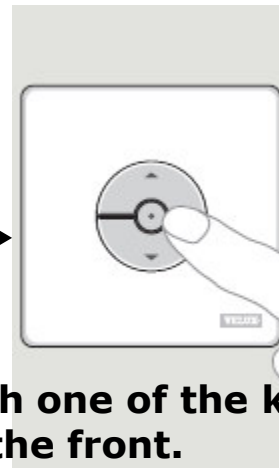


Green LED
flashes
slowly

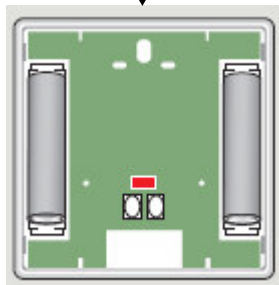

**RED LED =
Failure.
Start over
again.**

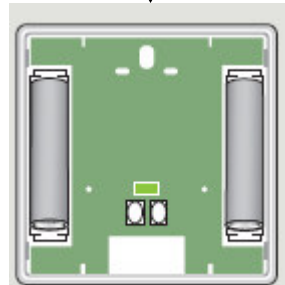

**Green LED =
OK. Wait
until green
LED turn off
before next
step!**

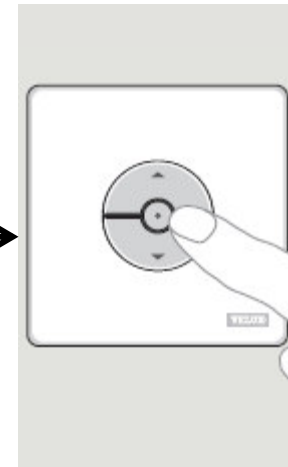

**Press the STOP button on the front of the KLI 110
and within 3 seconds press the DOWN button
afterwards.**

**The DSD will begin calibrating and drive to the
top and the bottom.**